



Thank you for purchasing KMAX MM from IWL (InterWorking Labs).

This page is intended to help you set up and begin using your KMAX MM.

More detailed documentation is available on the IWL website: [iwl.com](http://iwl.com)

## Package Contents:

Please check that you have the following items that are shipped in the KMAX MM package:

1. The KMAX MM device. The serial number and MAC addresses may be found on a label on the bottom.
2. A power adapter. *Use only the power adapter supplied by IWL.*

## Getting Started

Please see the **User Guide**.

You can find this by going to:

[https://iwl.com/user/resources/kmax-system-guide/kmax\\_system\\_guide.pdf](https://iwl.com/user/resources/kmax-system-guide/kmax_system_guide.pdf)

User Name: **U7C38\_1**

Password: **9453A18**

## Ethernet Interfaces

The KMAX MM has several Ethernet interfaces. One is used for control – this is called the “management interface.” You will connect the management interface to an IPv4 network that is accessible from the web browser(s) through which you will operate KMAX MM. Once operational you may configure the management interface to also use IPv6.

The other Ethernet interfaces are used to carry the packets that will be passing between the devices you are testing.

The management interface is highlighted in this image:



## Passwords:

Please save these passwords; they may be required to perform administrative operations.

Username	Password	Function
kinfo	info	Get configuration information using the serial cable
ksetup	jhtav5c	Set configuration information using the serial cable